



Installation Instructions

3rd Generation Chevy Blazer & GMC Jimmy



Please read instructions thoroughly before starting installation

****Remove all contents of the Softopper carefully to protect from scratches.**
Windows scratch easily! Keep protective layer placed between them when they are stacked.**

Estimated Installation Time: 1-2 hours

Beginning Note: It is best to do the initial installation in warmer temperatures (70+ degrees F). The fabric of the top is at its tightest when it is new. Installing it in warmer temperatures initially will ensure that the fabric is easier to work with. The fabric of the top will relax slightly with time and become easier to put on.

****Safety Notes****

Please read the following before driving with the Softopper installed:

1. It is highly recommended that a boot cover/storage bag is used when the topper is in its retracted position. This will prevent the top from catching in the wind.
2. This product is designed to shield the occupants from ordinary weather conditions.
3. DO NOT rely in any way on the soft top to contain occupants within the vehicle, or to protect against injury or death in the event of an accident or a roll-over.
4. This top will not protect the occupants from falling or flying objects Never operate vehicle in excess of manufacturer's recommendations or specifications.


Tools needed for installation:

- 1/2" Socket Wrench
- 7/16" Socket Wrench
- Drill
- #2 Phillips Drill Bit
- #2 Phillips Screwdriver
- 11/32" Wrench, Socket, or Pliers

Table of Contents

1. Inventory.....	3
2. Hardware Installation	
1. Bedrails.....	4
2. Header Bar.....	8
3. Folding Frame.....	12
3. Soft Top Canopy Installation.....	13
4. Retracting the Soft Top.....	17
5. Softopper Care and Maintenance.....	18
6. Warranty Information.....	19

Your Softopper Kit Should Include the Following Pieces

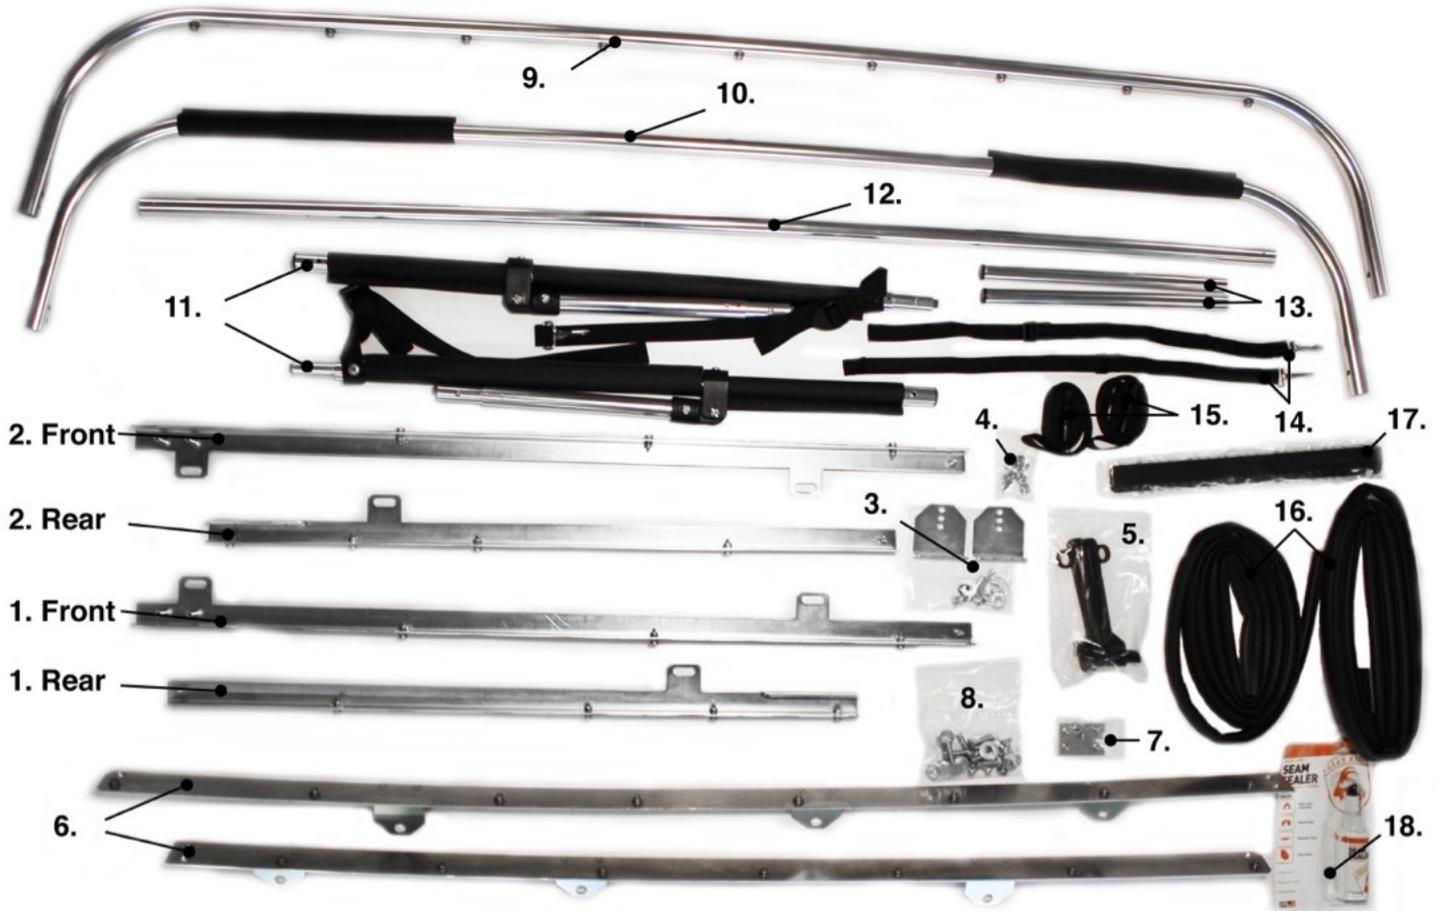

1. Driver Side Front and Rear Bedrails

2. Passenger Side Front and Rear Bedrails

3. Bag Containing 2 Pivot Brackets & Hardware

4. Small Bag Containing 2 Bedrail Loops

5. Bag Containing 2 Black Plastic Rear Bar Retainers

6. Driver Side and Passenger Side Header Bars

7. Small Bag Containing Header Bar Joining Bracket

8. Bag Containing (12) 1" Hex Bolts and Washers

9. Rear Cross Bar

10. Forward Cross Bar

11. Driver Side and Passenger Side Folding Frames

12. Rear Window Bar

13. (2) 12" Rear Window Bars

14. 2 Safety Straps

15. 2 Adjustable Tensioning Straps with Buckles

16. (2) 106" Bulb Seal Strips

17. 3 Velcro Strips

18. 1 Container of Seam Sealer


19. 1 Softopper Canopy (not depicted above)

20. 1 Protective Boot Cover (not depicted above)


Bedrail Installation

**Colored instructions available for download on our website on product page under “Installation”; “Download PDF”.

1. Begin by removing the hard top from the vehicle. Keep all 12 bolts. They will be used to secure the bedrails and header bar to the vehicle. We have also supplied 12 bolts and washers.
2. Locate the 2 driver side bedrails and the bag containing the 2 pivot brackets and hardware.
3. Remove the white protective paper from the bottom of the bedrails that is covering the weather stripping.
4. On a clean, level surface join the driver side front bedrail piece and the rear bedrail piece with the slotted pivot point bracket as shown. Stickers on the bedrails indicate driver and passenger side front.

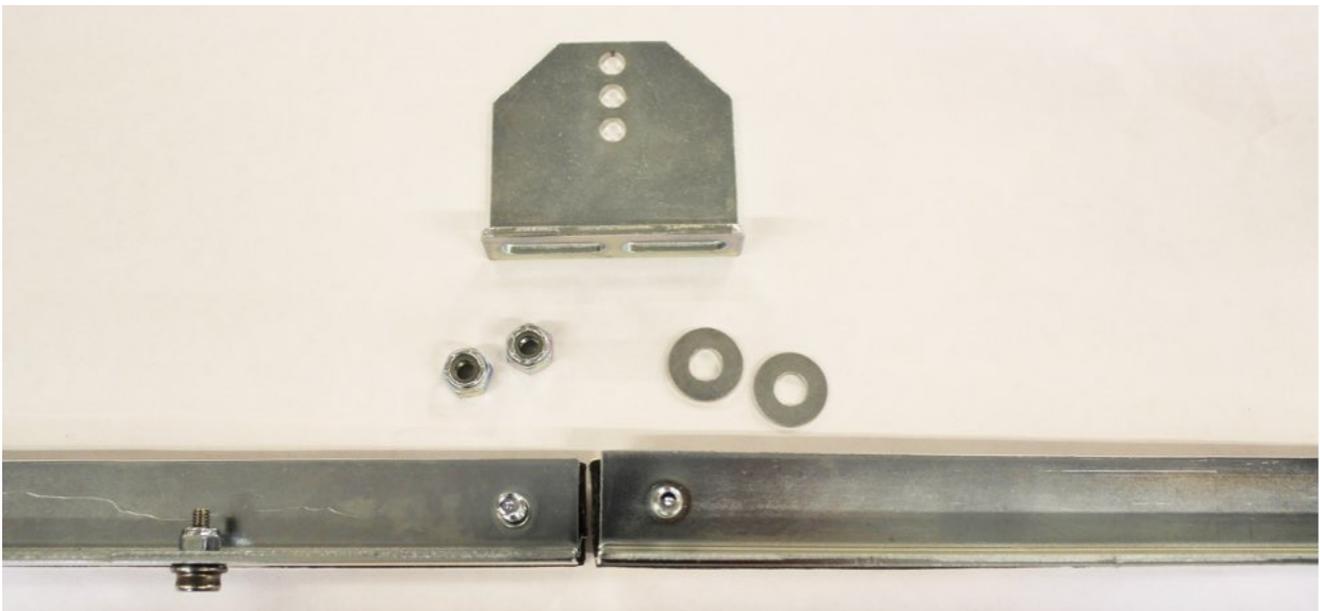


5. Place the washers and nuts on top.

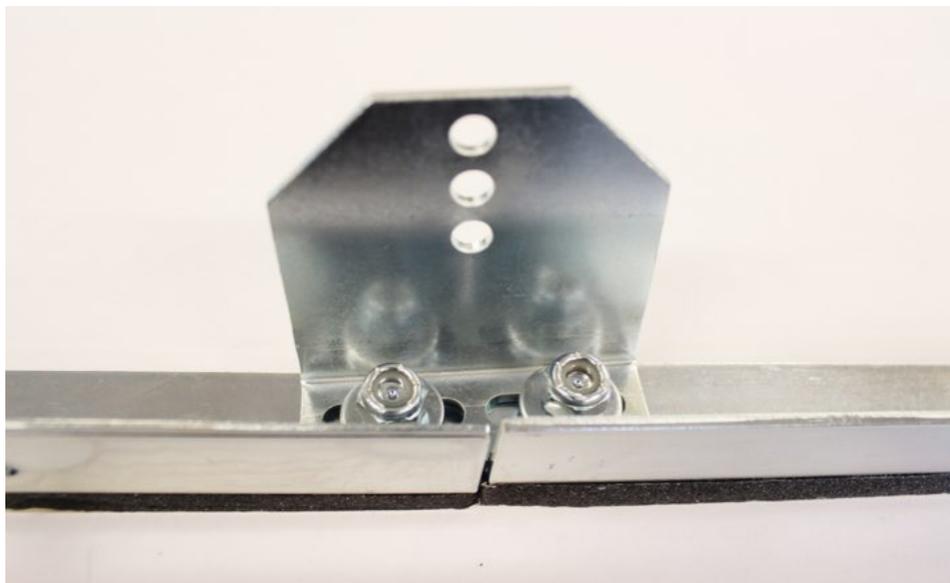

6. For proper alignment, the 2 bolts should be centered in the slots. Use a straight edge to also make the bedrails straight, and securely fasten the nuts using a 7/16" socket.
7. Insert the pivot pins into the middle hole of the pivot brackets.




8. Secure the E-Clip onto the pivot pin. Make sure the E-Clip is in the small indent in the pivot pin. It helps to use the flat edge of something metal to push the E-Clip on.

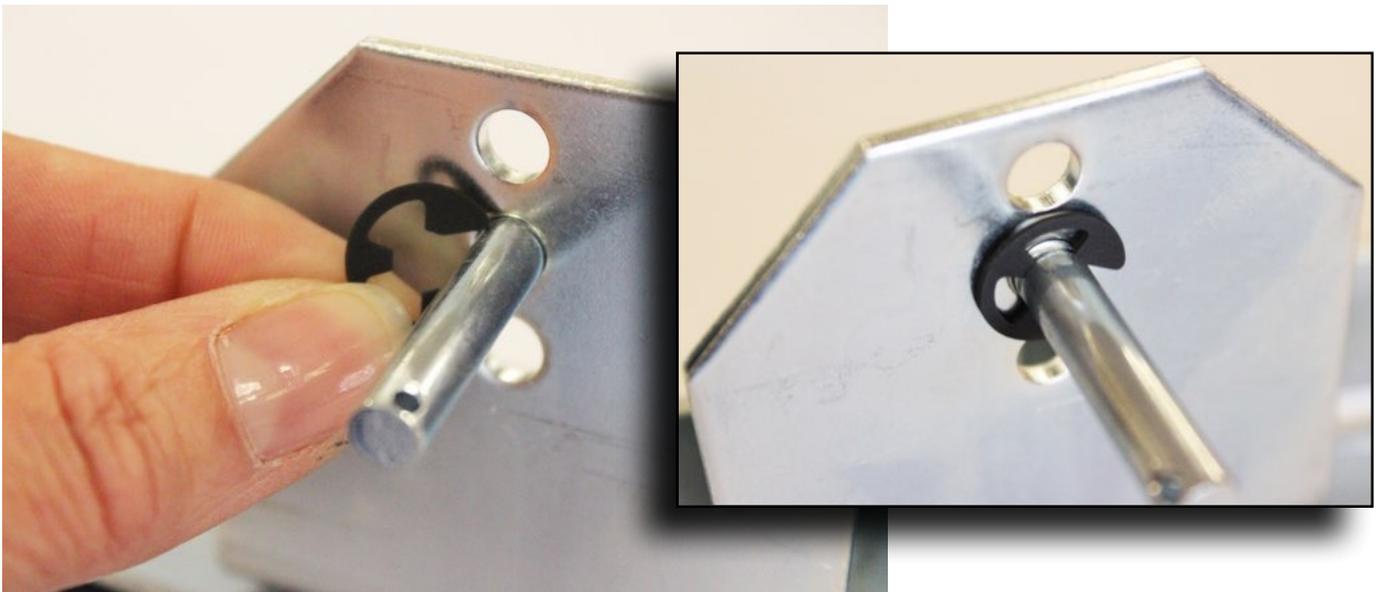


9. Insert safety ring into pivot pin hole by twisting the safety ring.
10. Repeat all of the above for the passenger side bedrails and pivot brackets.



11. Locate the bag containing 2 black plastic rear bar retainers and hardware.
12. The plastic bars are marked “A” and “B”. “A” is the driver side piece and “B” is passenger side. The retainer slot should face inward and the ring should be up as shown.
13. Using a #2 Phillips screwdriver and the 4 screws in the bag, install the black plastic rear bar retainers to the mounting location on the rear bedrail oriented as shown below. Center the screws in the slot.
14. Save the 2 remaining, self drilling screws in the bag for later in the installation process.

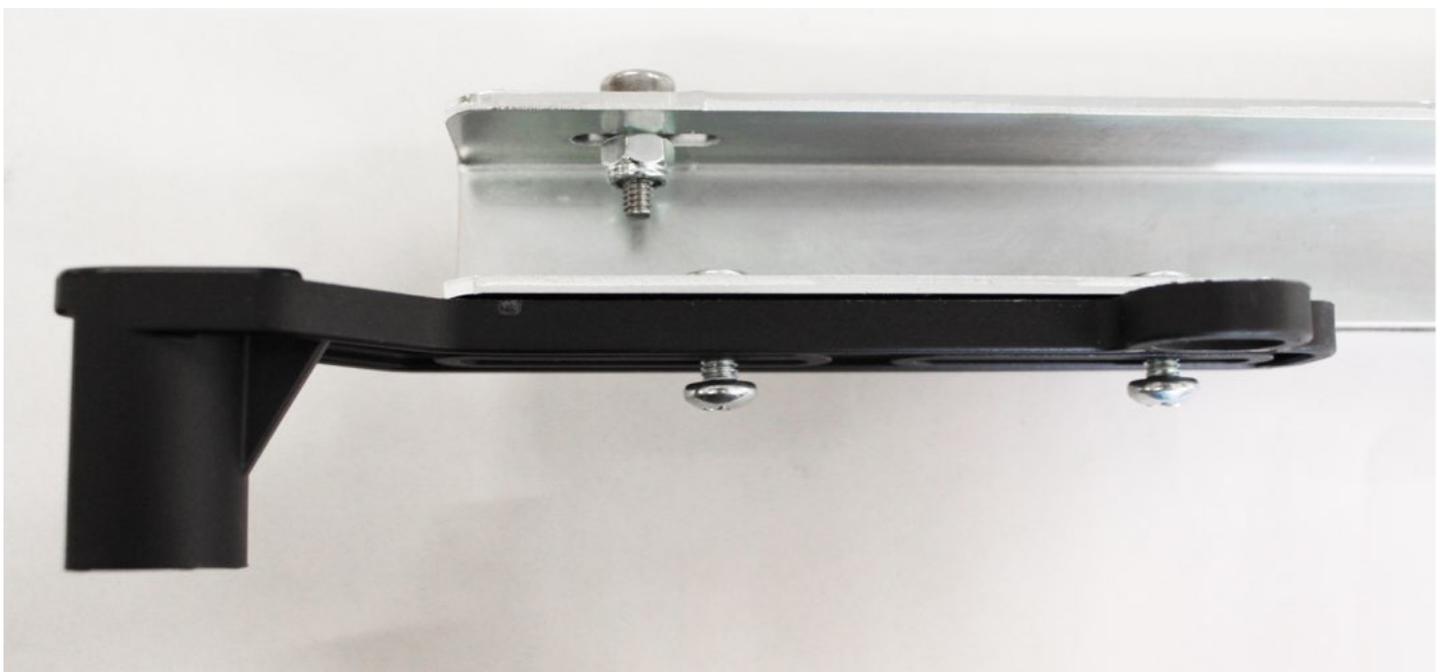

15. Locate the small bag containing the 2 bedrail loops and hardware.

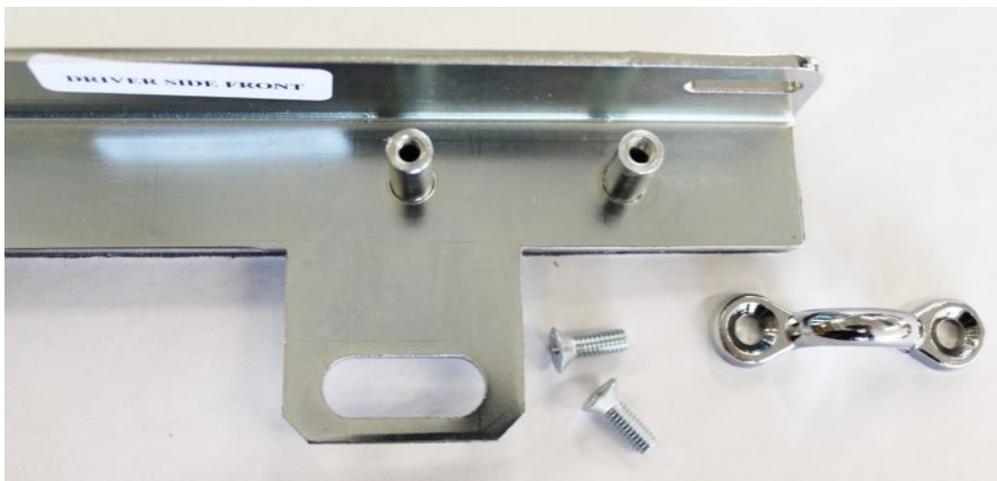


16. Screw the bedrail loops into the threaded standoffs at the front of the bedrail. Save the 2 remaining screws and nuts for later in the installation process.




17. Repeat on passenger side bedrail.

18. Using the hard top bolts that you previously removed from the vehicle or the supplied 1" Hex bolts and washers, mount the bedrails onto the vehicle. Center the bolts in the slots and fasten securely.

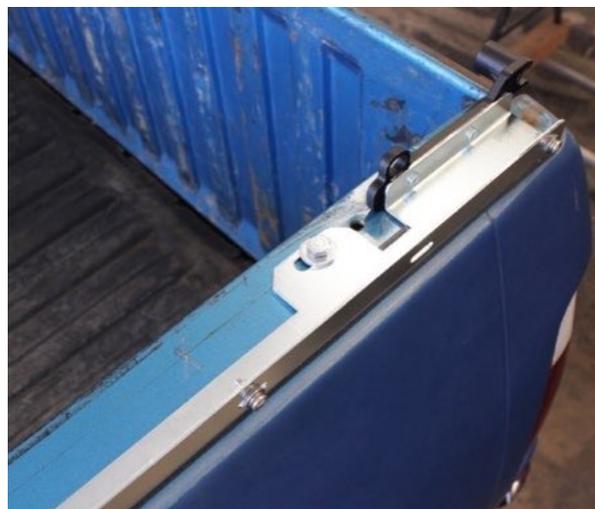


Header Bar

1. Locate the driver side and passenger side header bars and the small bag containing the header bar joining bracket.

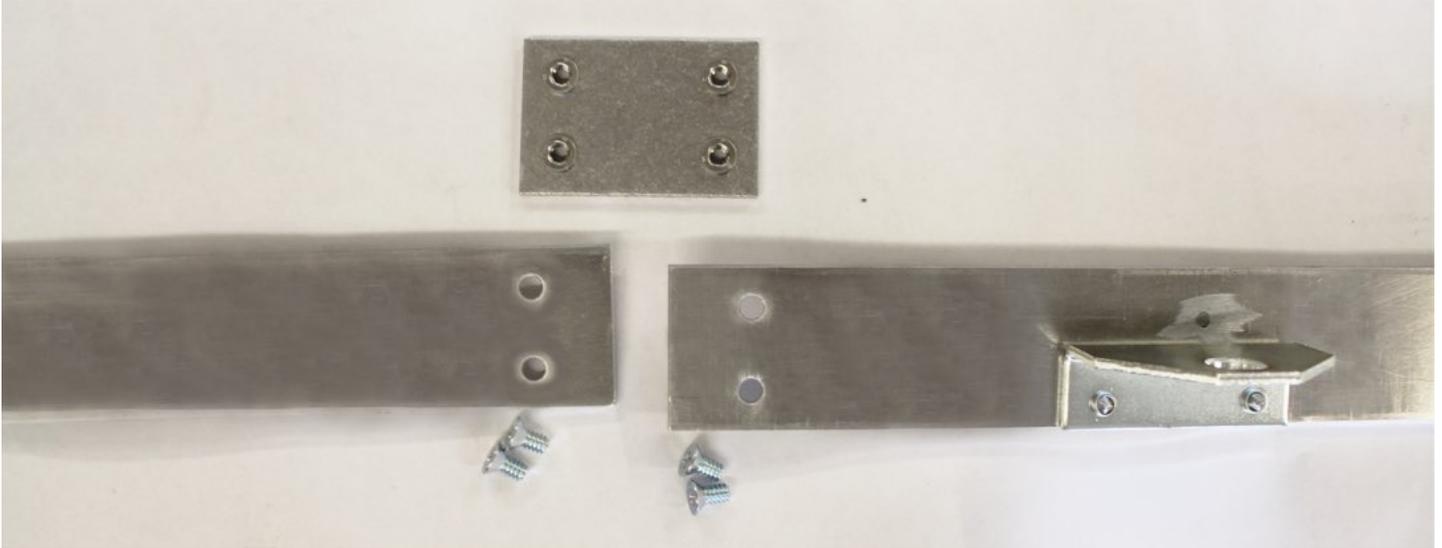

2. Place bracket on the bottom of the header bars with the pemnuts on the bracket facing down, the header bar brackets facing down, and the snaps on the header bar facing up.
3. Screw the 4 screws in through the top of the header bars and bracket to join the two header bars.

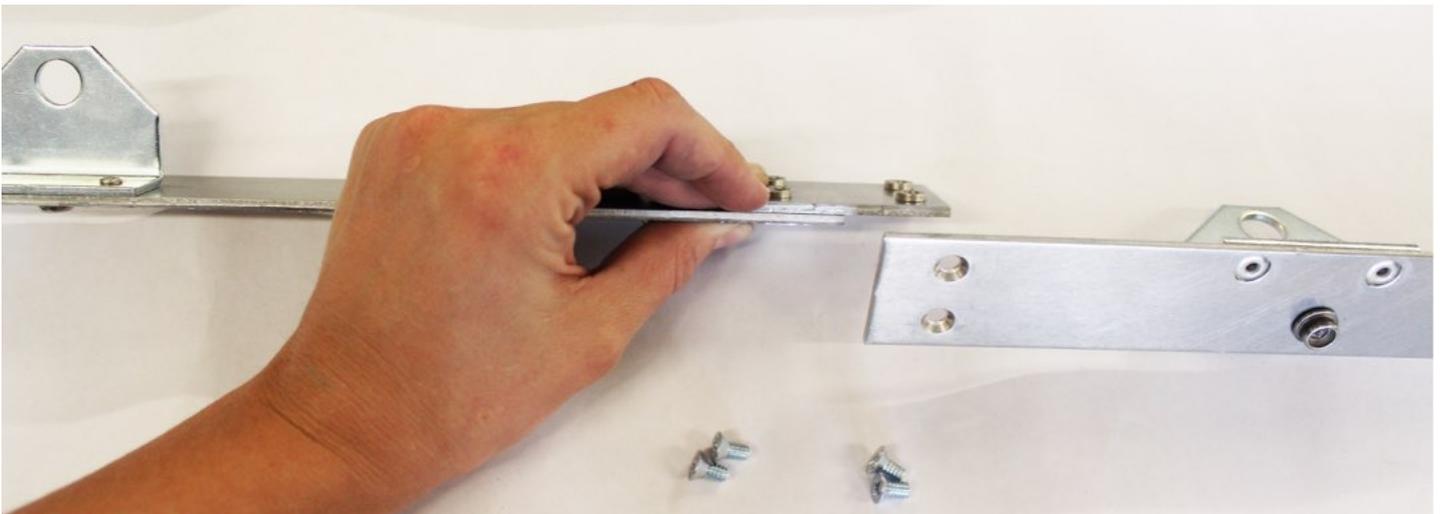

4. On the vehicle, use a 50/50 alcohol and water mix (or any similar cleaning solution) to thoroughly clean the upper rear face of the cab frame where the hard top roof met the frame. Let dry completely. There will be weather stripping installed there.

- Using one of the provided bulb seal strips, carefully place it along the cab frame a few inches at a time with the sticky side toward the front of the vehicle. The header bar will mount over this, creating a weather seal. The 106" strips will reach all the way across.



- Using the bolts that were removed with the hard top and/or the provided bag of 1" Hex bolts and washers, secure the header bar loosely to the vehicle through the top 4 brackets only for now. The snap studs should face up, the brackets down, and the header bar should rest against the weather stripping installed in the previous step. The snaps should be forward of center.



- Shape the curved area of the header bar tightly against the contour of the vehicle's cab and the installed weather stripping. Do this by pulling down and pushing inward, even over-bending the bar slightly.
- Once the bar is centered, loosely fasten the remaining bolts into the header bar. If the desired weather seal is not achieved after the initial bending of the header bar, you may have to remove the header bar and bend it a little more so that it will hold tightly to the weather seal. Also, keep in mind that the holes on each end of the header bar will need to mount to the slots on the bedrails. Ensure that these line up before securely fastening the header bar bolts.




9. Clean the top of the header bar with the same 50/50 solution.
10. Using the 2 small flathead screws and nuts that were in the small bag with the bedrail loops, **loosely** fasten the bottom of the header bar to the bedrails through the provided holes and slots. The nut should be on the inside of the vehicle. The bulb seal will eventually cover this screw.



11. Using the other provided bulb seal strip, place it along the top, back edge of the header bar as shown. The small flange on the bulb seal should face upward and backward toward the rear of the vehicle. Keep the protective tape over the last few inches of the strip where it

will cover the screws on either side shown in the photo above. Once everything is lined up later in the installation process, remove protective tape from bulb seal and adhere it to the header bar.

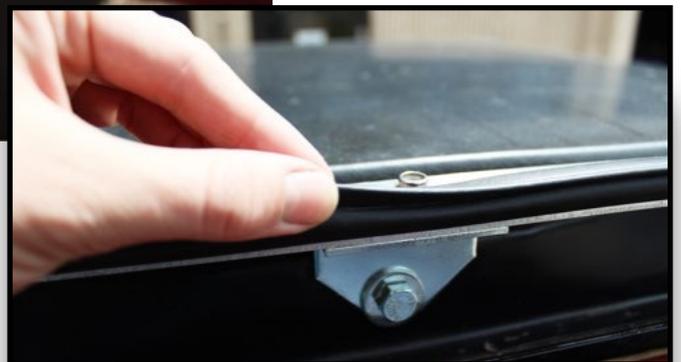


Folding Frame Assembly and Installation

1. Locate the Rear Cross Bar and the 2 adjustable tensioning straps with buckles.
2. Slip the small loops on the ends of the tensioning straps onto the cross bar such that the tensioning buckle will be oriented downward when attached to the forward cross bar as shown.



3. Join the two cross bars to the 2 folding frame uprights by coordinating the colored dots provided on the pieces.
4. Once connected, slide the 2 black bar sleeves on the forward cross bar down to meet the folding frame. These prevent the aluminum cross bars from touching the windows. When the bars are hot, direct contact can cause discoloration in the windows.
5. Remove the safety rings from the pivot pins.
6. Using the holes 1" from the bottom of the folding frame, slide the frame onto the pivot pins. Secure the safety rings back on.
7. Do NOT secure the rear safety straps yet. The photo above shows where they will **later** need to be latched to the loop on the rear plastic bar retainers.

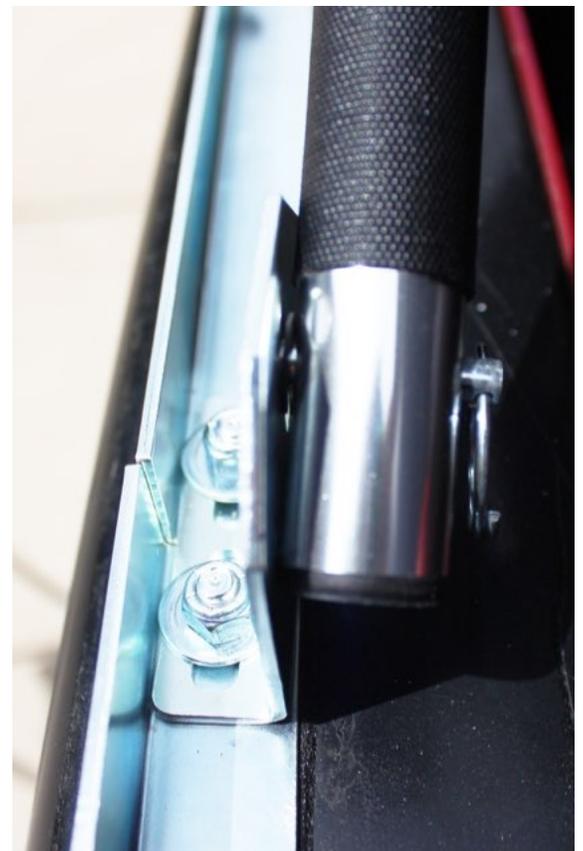


Soft Top Canopy Installation

1. With the tailgate open, lower the folding frame to the rear of the vehicle.
2. Place the canopy on the tailgate with the rear canopy snaps facing up as shown.



3. Place the 2 tensioning straps between the 2nd and 3rd snaps on each end of the rear cross bar as shown.
4. Attach the two upper tensioning straps to the forward cross bar by releasing the side release buckles and reattaching. Make sure there are no twists in the straps. Keep loose for now.
5. Snap the canopy to the rear cross bar by slipping the fabric under the bar and around as shown.

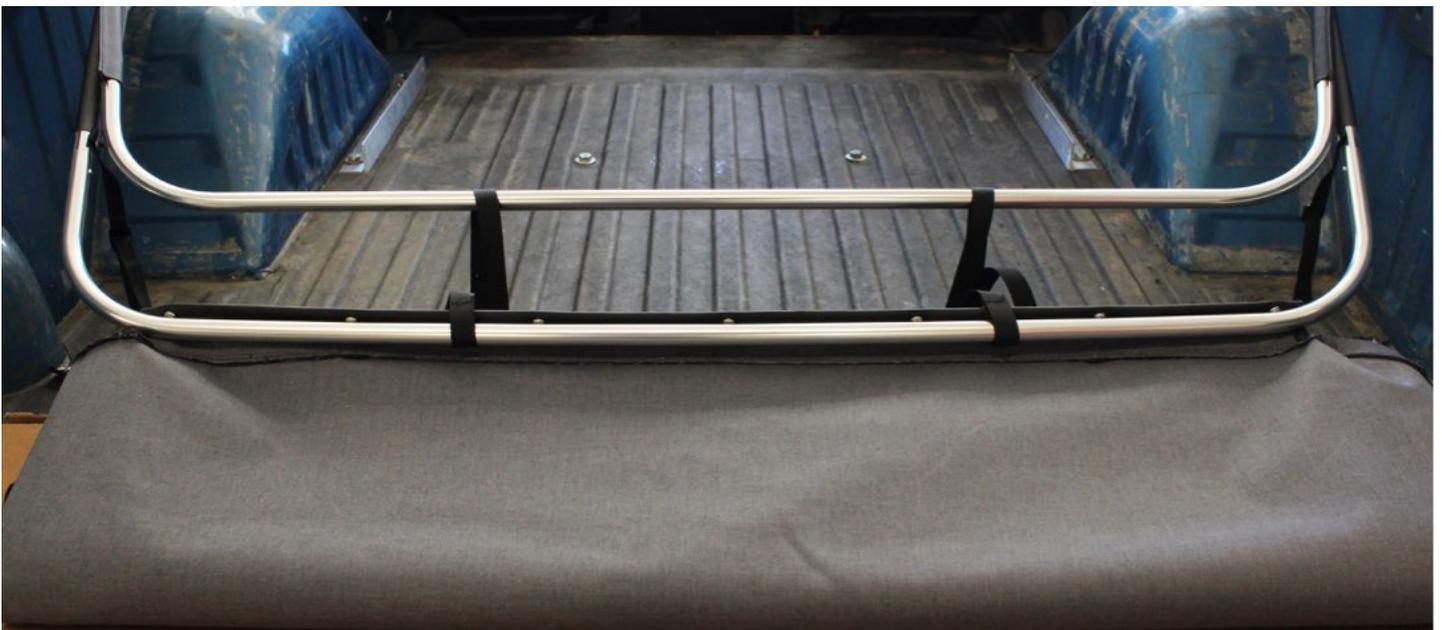


6. Stand on the tailgate and carefully lift the entire canopy and folding frame up and forward



until you can rest the front of the canopy over the cab roof and secure the roof snaps beginning with the center snap.

7. From the ground, loosely latch the 2 rear safety straps to the rings on the plastic rear bar retainers as shown above. The straps are already riveted to the folding frame.
8. Locate the 2 buckling safety straps from the large bag. Hook the straps into each bedrail loop on either side of the vehicle, and just let the buckle end hang down into the vehicle. These safety straps are to be buckled to the front most buckle on the canopy whenever driving with the side panel windows rolled up and buckled. The straps will prevent the chance of the canopy from coming loose off the snaps while driving at high speeds.
9. Undrape the side window panels and rear window panel, and let them hang loosely.
10. While pulling down on the rear cross bar, tighten the 2 rear safety straps (not the upper tensioning straps yet). The safety straps should be snug, not loose nor overtightened.

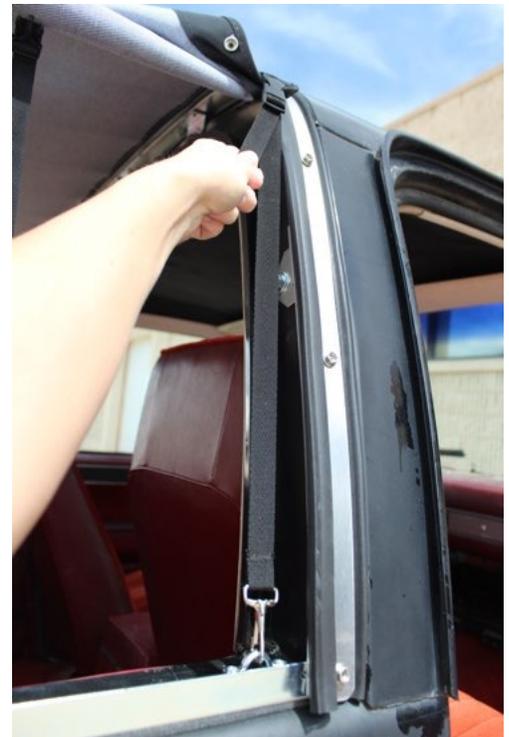

11. Connect the forward most snap on the side panel to its mate on the bedrail on the driver side and the vertical snaps on the cab.
12. Connect the rear most snap on the same panel to its mate on the bedrail by pulling down on the rear cross bar and pulling on the fabric if necessary.
13. Tighten the rear safety strap further to relieve excess tension on the rear snap. Note that it is a good idea to share tension between the rear safety straps and the rear most snaps instead of having all the tension only on the snaps. This will also help with any wrinkles in the rear corners.
14. Now snap the rest of the snaps on the driver side.
15. Repeat the above on passenger side. Note that we recommend snapping the front most and rear most snaps first each time you install the top on the vehicle. This makes it easier to snap the remaining snaps and align the canopy properly.
16. Adjust the 2 upper tensioning straps between the forward and rear cross bars until there is adequate upward pressure to give the canopy its taught shape.
17. If there is a wrinkle in the fabric between the two front most snaps for the side panels, adjust the bedrails until tension in fabric is desirable. Securely fasten all bedrail bolts, the screws and nuts on the bottom of the header bar, and place bulb seal against the bottom of the header bar.
18. Locate the straight Rear Window Bar, the (2) 12" bars, and the two remaining self drilling screws that were in the bag containing the black plastic rear bar retainers.



19. Insert the 2 shorter bars into the ends of the longer bar with the plastic end caps facing out.



20. Standing at the rear of the vehicle, push the two ends of the bar assembly into the rear plastic bar retainers while adjusting the length of the bar assembly as necessary. It should fit securely end to end into the given space within the plastic bar retainers.

21. Center the long bar over the other two 12" bars.

22. Using a drill and a #2 Phillips bit, screw the 2 small self drilling screws into the pre-drilled holes to join the 3-bar assembly.

23. Now remove the bar and slide it into the sewn-in sleeve at the lower part of the rear window panel. Center the bar.

24. Join the zippers in the upper corners of the rear window panel and zip closed the window panel.

25. Clip the bar back into the plastic retainers.

26. Close the tailgate while lifting up slightly on the fabric hanging at the bottom of the window panel.

27. ****Optional:** Use the provided extra strips of velcro to hold the bottom of the rear window flap to the tailgate. Wipe clean and dry the tailgate surface before placing the sticky side of the velcro onto the vehicle.

28. **Right out of the box the Softopper may not be 100% waterproof.** If you experience any water seeping through at the seams, apply **Seam Sure** (supplied), on the inside of the affected seams. **Shake** Seam Sure well and apply liberally to the inside seams concentrating on areas where needle and thread penetrated the fabric.



Installation Complete

Retracting the Soft Top

1. Undo all side snaps.
2. Raise the rear window panel zippers all the way to the top without disconnecting them.
3. Release the rear window retainer bar, and remove from sleeve.
4. Place the side panels up onto the roof canopy neatly.
5. Place the rear window panel up onto the roof as shown.



6. Loosen or release the 2 rear safety straps.
7. Undo all cab roof snaps.
8. Carefully make multiple folds backward from the front of the canopy until it is about the same size as when it originally came out of the box. This will ensure that the protective boot cover fits over the folded canopy.
9. While leaving the 2 safety straps out, place canopy in protective boot cover, and secure the boot cover straps.
10. Once the canopy is in the protective boot cover, hook the 2 safety straps back onto the rear bar retainers and tighten.
11. To fully remove the Soft Top once it's within the boot cover, release the 2 safety straps, remove the 2 safety rings from the pivot pins, and completely remove the top. Reinstall the safety rings.
12. **Optional: Roll up side and/or rear panels, and buckle them up to the roof of the canopy for an open air, covered experience.

Softopper Care and Maintenance

Your top is made of the finest materials available. To keep it looking new and for product longevity and durability, it will need periodic cleaning and maintenance.

Washing: The fabric should be washed from time to time using a mild soap and warm water. Be sure to rinse all soap off the top when washing is complete.

Vinyl Windows: Windows should be kept clean to avoid scratching. Wash with a water-soaked sponge or cloth and a mild dishwashing detergent. **Do not use a coarse brush on the windows and never wipe the windows when they are dry.**

COLD WEATHER IS TROUBLE: As with all automotive and marine clear vinyls, extreme care must be taken when rolling up or folding in cold temperatures. This point cannot be stressed enough! **Clear vinyl becomes stiff in cold temperatures and may crack. Retracting the Softopper in cold temperatures is not recommended and will void the warranty for the windows (see Warranty information for more detail on length of window warranties).** When opening the rear of the Softopper in cold weather, be sure to raise the zippers as high as possible so that any folding will occur to the topper fabric and not to the clear vinyl window.

Zippers: Keeping the zippers clean and lubricated with a silicone lubricant will help prevent damage and keep the zippers in smooth working condition.

Leakage: As with any sewn automotive top there is always a slight risk of leakage. **Right out of the box the Softopper may not be 100% waterproof.** If you experience any water seeping through at the seams, apply **Seam Sure** (supplied), on the inside of the affected seams. **Shake** Seam Sure well and apply liberally to the inside seams concentrating on areas where needle and thread penetrated the fabric.

Snaps: Keep snaps clean and lubricated with a silicone lubricant to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and gently pry apart to prevent damage to the snap or top fabric. If any snaps need to be replaced due to sticking or damage please call Softopper and we can send out a small do-it-yourself repair kit.

For further information please contact:
Softopper LLC, customer service
(800) 810-7227 or (303) 304-0533

Warranty

We warrant our 4Runner, Jeep Wrangler, Blazer, Jimmy, Scout, Bronco, and RamCharger Softoppers to be free from defects in material and workmanship for a period of one year, with the exception of vinyl windows and zippers, provided there has been normal use and proper maintenance.

Vinyl Windows are warranted for a period of 3 months from the date of purchase.

Zippers are guaranteed to be in perfect working condition when leaving the factory. Due to atmospheric conditions, dirt, sand, road grime, dust, and abrasive cleaners, etc., zippers are warranted for a period of 6 months from the date of purchase.

Toyota 4 Runner, Jeep Wrangler, Blazer, Jimmy, Scout, Bronco, and RamCharger side curtain windows are warranted for 45 days from the date of purchase.

Important: Retracting or closing the top when the temperature is below 40 degrees will void the warranty on the windows, as clear vinyl plastic can crack very easily at these temperatures. This top is meant to be a warm-weather product. It is not intended to be used during cold temperatures or winter months.

Returns must be pre-approved and have Softopper's issued RGA number attached. Any defective items must be returned with proof of purchase to Softopper 4750 Nautilus Court South, Unit B Boulder CO 80301, **freight pre-paid**. Items returned must be carefully packed, in clean condition, with plastic windows protected from scratching and creasing. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Softopper's obligations under this warranty are limited to the aforementioned **repair** or **replacement** of warranty defects for which return authorization has been received during the warranty period, and Softopper SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF THIS OR ANY IMPLIED WARRANTY. This warranty applies to the original purchaser only. All remedies under this warranty are limited to repair or replacement of any item or items found to be defective by the factory within the time period specified.

For further information or request for repair work, please contact:

Softopper LLC, customer service
(800) 810-7227 or (303) 304-0533